




























Buttons function instructions

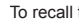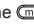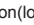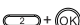-  Out button. Press and release  . The TV wall mount will fully unfold.
-  In button. Press and release  . The TV wall mount will automatically return to rest against the wall.
-  Stop button
-  The left button. Press and release  , the TV wall mount will swivel to the left until  is pressed or the TV wall mount swing to -30 degrees to stop.(Note : Using this button is valid only when the wall mount fully unfolds.)
-  The right button. Press and release  , the TV wall mount will swivel to the right until  is pressed or the TV wall mount swing to 30 degrees to stop.(Note : Using this button is valid only when the wall mount fully unfolds.)
-  Memory button1.Press and hold for 5 seconds, the buzzer will sound twice beep beep, LED light will turn on for 1second, The memory is saved as location 1.
-  Memory button2.Press and hold for 5 seconds, the buzzer will sound twice beep beep, LED light turn on for 1second, The memory is saved as location 2.
-  To recall the  button(location 1). Press and release  button, and then press  button, The TV wall mount will automatically swivel to the location1 after the buzzer sounds once.
-  To recall the  button(location 2). Press and release  button, and then press  button, The TV wall mount will automatically swivel to the location2 after the buzzer sounds once.
-  Learning button, Please read the instructions below for more info.

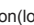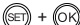






Learn mode operation instructions

The loss of matched remote control would result in TV wall mount being unusable. The **LEARN MODE** is used to learn how to use TV remote (ONLY suitable for the TV remote of popular brands.) to control TV wall mount.

Note:






- TV remote can't replace the all functions of matched remote control. Only **LEARNING** the five buttons functions. With , , ,  and  respectively.
- The user must follow the rules below when using the TV remote to control TV wall mount. Select the alternate buttons from the TV remote, and the button that can't direct control the TV .

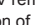• LEARN MODE instructions as shown below:

- STEP1:** Press and hold  for 5 seconds until LED light on the matched remote control stays on, and then press  . The buzzer will sound once, the red LED light on the IR receiver will stay on, then the **LEARN MODE** will be entered.
- STEP2:** If **LEARN**  , please press  on the matched remote control until the buzzer sounds twice, the red LED light on the IR receiver will change from being steady to a slow flash.
- STEP3:** Aim the TV remote at the IR receiver, and press the button on the TV remote that you need to set as the function of  button until the buzzer sounds three times. the red LED light on the IR receiver will change from slow flash to a fast flash.
- STEP4:** Press  button on the matched remote control until the buzzer sounds four times. The red LED light on the IR receiver will turn off.  Button will be **LEARNED** successfully. If the buzzer only sounds once, then a **LEARN** failure.(The TV remote won't support the **LEARNING** function).

(Please follow step1 through step4 in turn if the user need to **LEARN** more buttons)



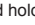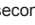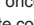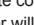












Learn "Power" button on the TV remote:

Press and hold  for 5 seconds until LED light on the matched remote control stays on , and then press  The buzzer will sound once, the red LED light on the IR receiver will stay on, then press and hold  button on the matched remote control until the buzzer sounds twice, then release the  button. The red LED light on the IR receiver will change from being steady to a slow flash. Aim the TV remote at the IR receiver, and press "Power" button. The buzzer will sound three times. The red LED light on the IR receiver will change from slow flash to a fast flash. Press  button on the matched remote control until the buzzer sounds four times. The red LED light on the IR receiver will turn off. "Power" button will be **LEARNED** successfully. If press "power" button, the TV wall mount will automatically reset.

Note: When there is no activity for over 20 seconds in any step .TV remote will automatically exit from the **LEARN MODE**.



M Motorized Turn Mount

-  والبلازما TFT و LCD حامل التركيب على الجدار لشاشات
-  Vægbeslag til LCD-skærm, TFT-skærm og plasmaskærm
-  Wandhalterung für LCD-, TFT- und Plasma-Geräte
-  Βραχίονας Τοίχου για οθόνες LCD, TFT και
-  Wall Bracket for LCD, TFT and Plasma
-  Soporte de pared para LCD, TFT y Plasma
-  Seinäkiinnike LCD-, TFT- ja plasmanäytölle
-  Support mural pour écrans LCD, TFT et plasma
-  Staffa per il montaggio a parete di LCD, TFT e plasma
-  Veggbrakett for LCD, TFT og plasma
-  Uchwyt ścienny do monitora LCD, TFT i plazmowego
-  Стенной кронштейн для ЖК, плазменного телевизора или TFT
-  Väggfäste för LCD-, TFT- och plasmaskärm
-  LCD, TFT ve Plazma Duvar Desteği
-  LCD, TFT 和等离子电视的壁上支架



إم
نشا البلازما أو LCD أو التلفاز أو جهاز العرض أو شاشة جهاز العرض أو أجهزة هاي فاي الأخرى أجهزة ذات قيمة عالية.
أثناء التركيب، يرجى مراعاة طق العمل المناسبة لشدة الصوت أو الشدة أو الإضاءة.
هذا المنتج ليس مناسباً للتركيب على الأرضيات.
هذه عدم المتكافؤ بأي طريقة من حيث ترتيب هذا المنتج، يرجى استشارة الفني المتخصص.



VIGTIGT!
Din plasmaskærm, LCD-skærm, tv, projektor, projektorsskærm eller andet HiFi-udstyr repræsenterer en betydelig værdi.
Hvis der medfølger skruer, passer de muligvis ikke til materialet i væggen, loftet eller gulvet.
Udskift skruerne med passende skruer, hvis det er nødvendigt.

Hvis du er i tvivl om noget i forbindelse med monteringen af produktet, skal du kontakte en ekspert.



ACHTUNG!
Ihr Plasma-, LCD-, TV-Gerät, Ihr Projektor, Ihre Leinwand oder sonstige HiFi-Ausrüstung stellt einen beträchtlichen Wert dar.
Die möglicherweise im Lieferumfang enthaltenen Schrauben sind unter Umständen nicht für das Material Ihrer Wände, Decken oder Böden geeignet.
Ersetzen Sie sie bei Bedarf durch geeignete Schrauben.

Wenn Sie bezüglich der Montage des Produkts unsicher sind, wenden Sie sich an einen Fachman



ΣΗΜΑΝΤΙΚΟ!
Οι τηλεοράσεις Plasma, LCD, οι κανονικές τηλεοράσεις, οι οθόνες προβολής ή άλλες συσκευές HiFi έχουν μία αξιοσημείωτη αξία.
Αν περιλαμβάνονται βίδες τους να μην είναι κατάλληλες για το υλικό του τοίχου, του ταβανού ή του πατωμάτος σας.
Αντικαταστήστε τις βίδες με κατάλληλες αν είναι απαραίτητο.

Στην περίπτωση που δεν είστε σίγουροι για κάποια ζήτημα σχετικά με την προσαρμογή αυτού του προϊόντος, παρακαλούμε συμβουλευτείτε έναν ειδικό.



IMPORTANT!
Your Plasma, LCD, TV, Projector, Projector Screen or other HiFi equipment represents a considerable value.
If screws are included they may not be suitable for the material of your wall, ceiling or floor.
Replace the screws with suitable ones if needed.

In case you are unsure regarding any aspects of the mounting of this product please Consult a professional.



IMPORTANTE
Los equipos de plasma o LCD, los televisores, proyectores y pantallas de proyección, así como otros equipos de alta fidelidad suponen una inversión considerable.
Si incluyen tornillos, puede que no sean adecuados para el material del que están formados la pared, el techo o el suelo.
Sustituya estos tornillos por otros más adecuados si es preciso.

Si no está seguro sobre cualquier aspecto del montaje de este producto, consulte a un profesional.



TÄRKEÄÄ!
Plasma- tai nestekidenäyttöjen, televisoiden, projektorien ja niiden valkokankaiden sekä muiden hi-fi-laitteiden arvo on huomattava.
Laitteen mukana toimitettavat ruuvit eivät välttämättä sovellu seinien, katon tai lattian materiaaliin.
Korvaa ne tarvittaessa sopivilla ruuveilla.

Mikäli olet epävarma mistä tahansa tämän tuotteen kiinnittämiseen liittyvästä seikasta, ota yhteys asiantuntijaan.



IMPORTANT!
Vos écrans plasma, LCD, télévisions, projecteurs, écrans de projection ou autre matériel Hi Fi ont une valeur considérable.
Les vis fournies peuvent ne pas être compatibles à la nature de vos murs, plafonds et sols.
Remplacez-les par des vis adaptées.

Si vous avez des doutes quant au montage de ce produit, veuillez consulter un professionnel.

WARRANTY CARD

MULTIBRACKETS.COM

MULTIBRACKETS™ Limited Warranty
Multibrackets warrants its products to be free of defects in material and workmanship for the product's Warranty Period.
The Warranty Period commences on the original purchase date of the product.

All Multibrackets products are covered by a limited product warranty:

- FIVE (5) years for metal video monitor mounts; all racks and non-electrical rack accessories
- ONE (1) year for all motorized and/or automated products, plastic speaker mounts; all speaker stands; all furniture; all wood (MDF) accessories

For warranty claims made during the Warranty Period, MULTI-BRACKETS will replace any defective product part free of charge. Should a part on your Multibrackets product fail, please create an RMA case on www.multibrackets.com/support to make a warranty claim. We will await your documentation and then discuss the problem with you and once we confirm the product is under warranty, we will ship replacement parts to you. This Limited Warranty does not cover the costs of removing and replacing defective parts from your Multibrackets product. So, if your problem requires a repair technician, you must pay any labor charges.

This Limited Warranty extends only to the original purchaser of the product and is automatically void if your Multibrackets product is modified in any way, improperly installed, taxed beyond its stated weight capacity or otherwise misused or abused. All Multibrackets products are intended for indoor use only and any

outdoor use voids this Limited Warranty. The Limited Warranty for wall and ceiling mounts is void if the mount is moved from its initial installation. To the maximum extent permitted by applicable law, Multibrackets disclaims any other warranties, express or implied, including warranties of fitness for a particular purpose and warranties of merchantability. Multibrackets will not be liable for any damages whatsoever arising out of the use or inability to use its products, even if Multibrackets has been advised of the possibility of such damages. To the maximum extent permitted by applicable law, Multibrackets disclaims any responsibility for incidental or consequential damages.

Multibrackets™ Stockholm Sweden 2014, www.multibrackets.com



Warning!
Always check the depth of the holes before starting an installation.
تحقق دائما عمق الثقوب قبل ان تبدأ في عملية التركيب.

ADVARSEL!
Kontroller alltid hullens dybde, før du går i gang med en installasjon.

WARNUNG!
Vor Beginn des Einbaus immer die Tiefe der Bohrungen überprüfen.

ΠΡΟΕΙΔΟΤΗΡΗΣΗ!
Ελέγξτε πάντοτε το βάθος των οπών προτού ξεκινήσετε την εγκατάσταση.

WARNING!
Always check the depth of the holes before starting an installation.

AVISO!
Controle siempre la profundidad de los agujeros antes de iniciar una instalación.

VAROITUS!
Säilytä reikien syvyys ennen asentamisen aloittamista.

ATTENTION!
Vérifiez toujours la profondeur des trous avant de commencer l'installation.

ATTENZIONE!
Verificare sempre la profondità dei fori prima dell'installazione.

ADVARSEL!
Sjekk alltid hvor dype hullene er før du begynner å montere.


OSTRZEŻENIE!
Przed przystąpieniem do montażu należy koniecznie sprawdzić głębokość otworów.



ПРЕДУПРЕЖДЕНИЕ!
Перед установкой всегда проверяйте глубину отверстий.

VAROITUS!
Kontrolla alidid hällens djup innan en installation påbörjas.


UYARI!
Montaja başlamadan önce daima deliklerin derinliğini kontrol edin.

警告!
請始終在開始安裝前檢查孔的深度。

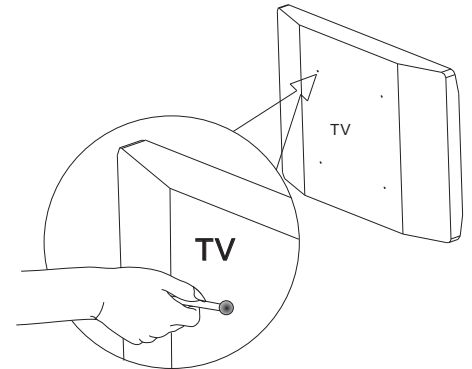


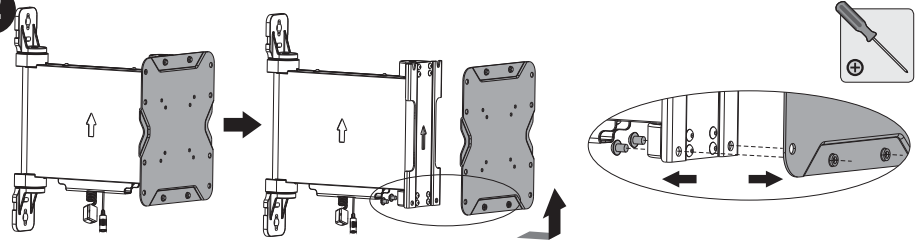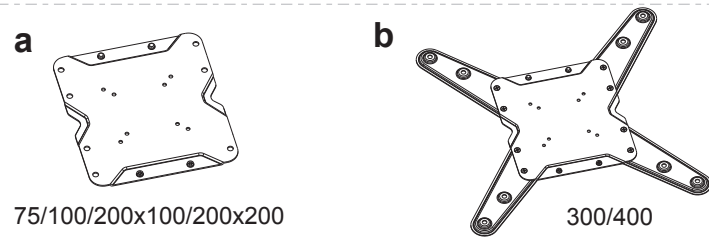


3

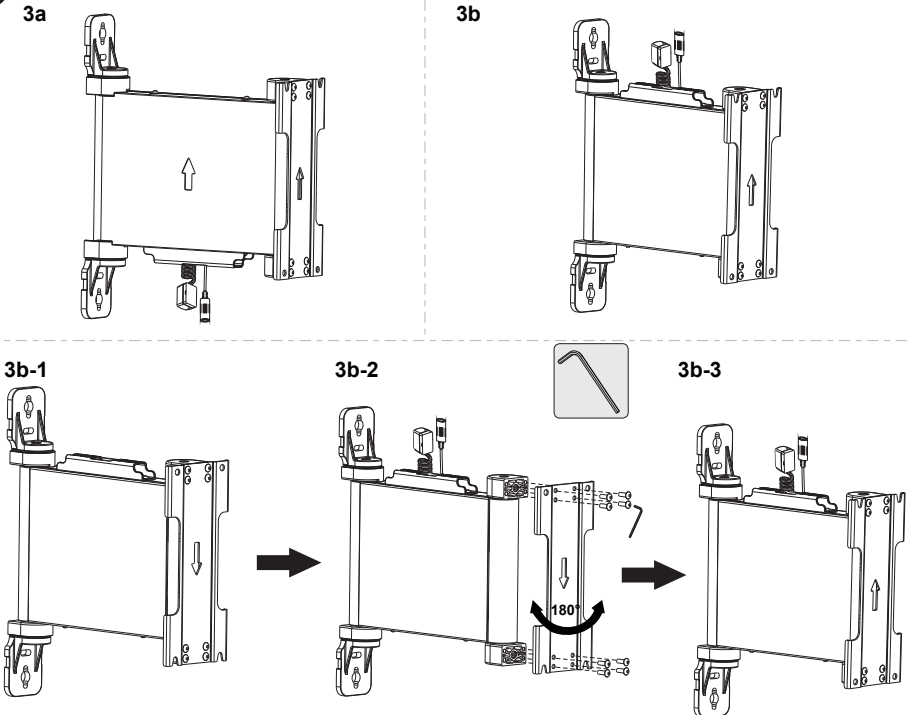


4a

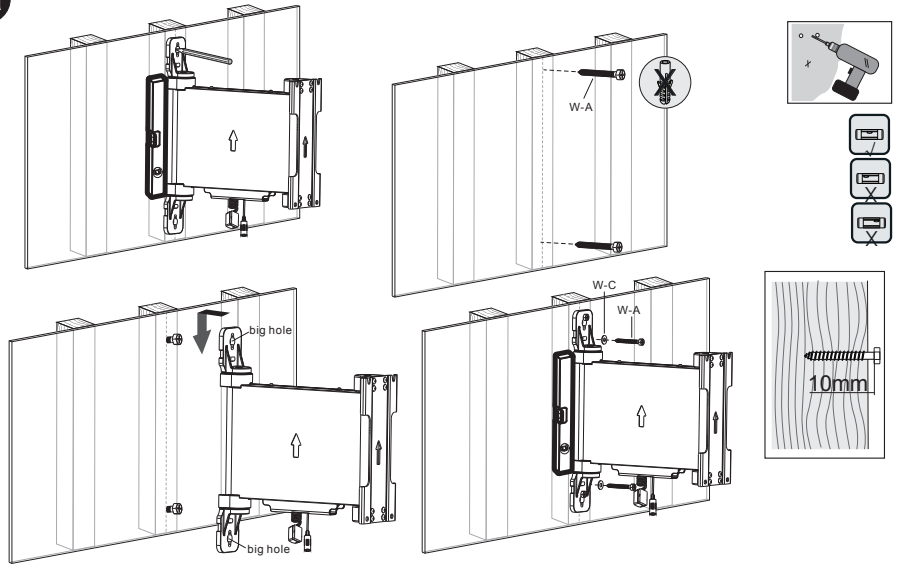


4b

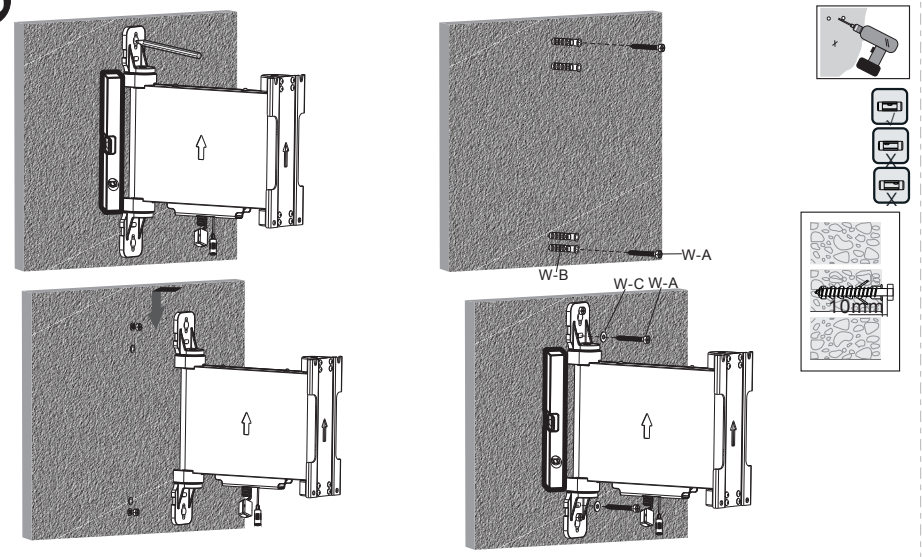


5

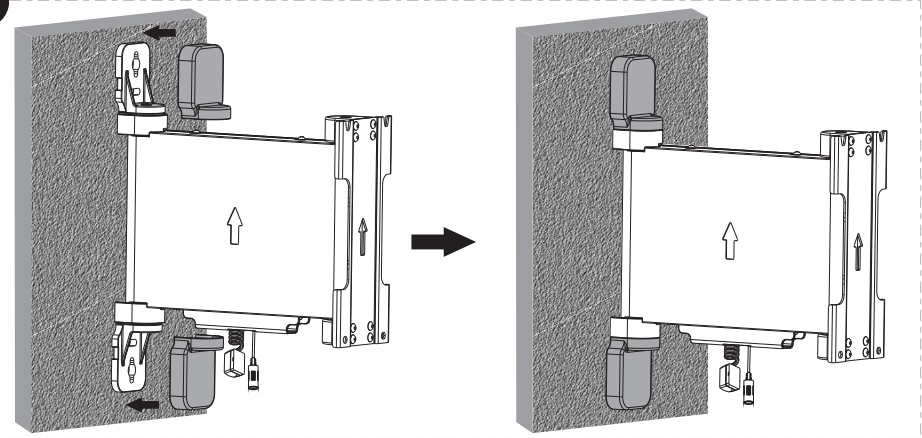


6

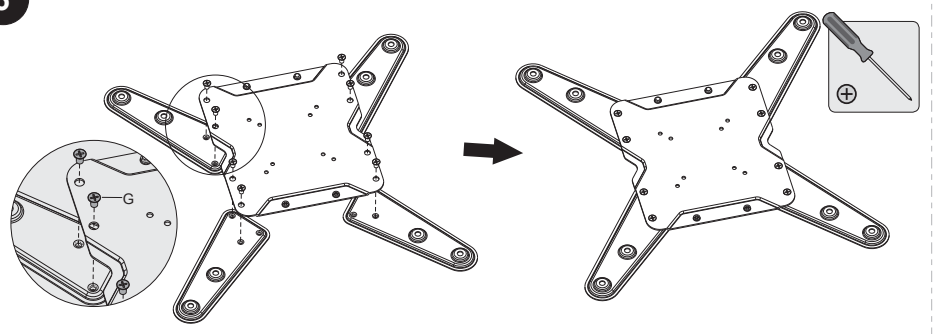


7a

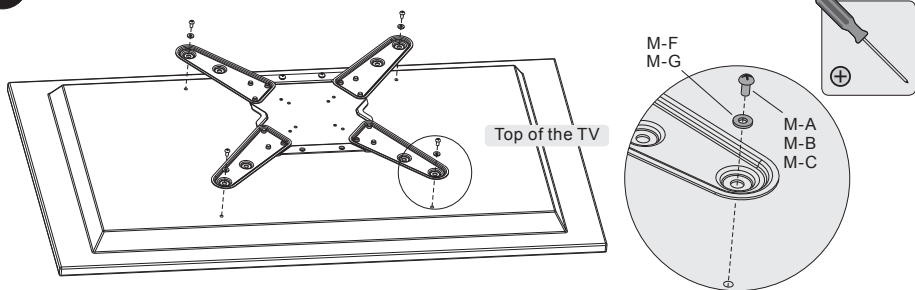


7b

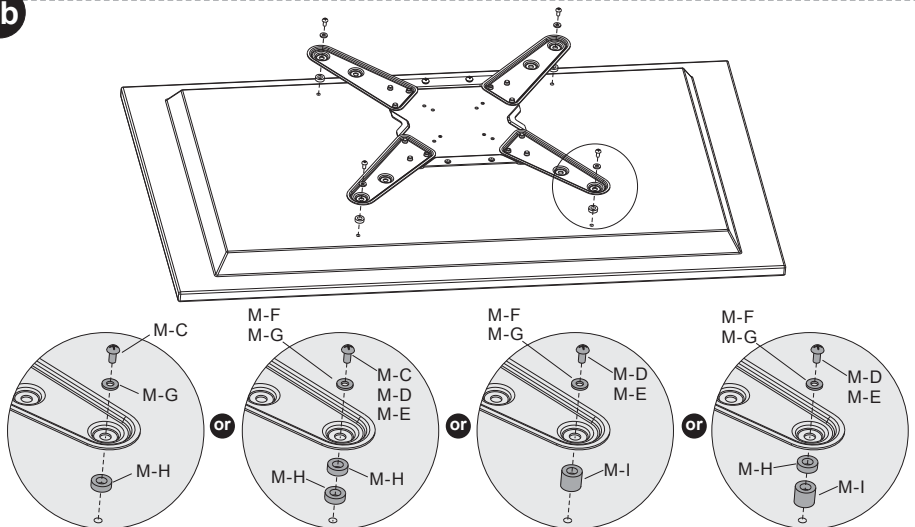

8

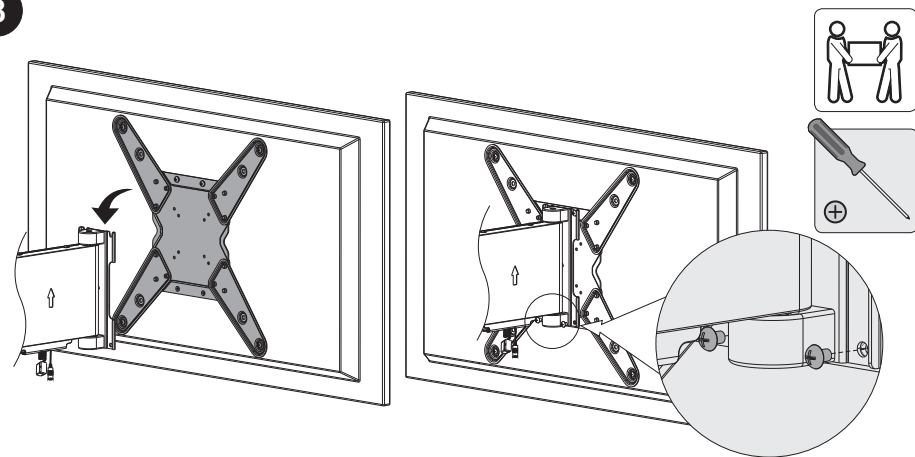


9

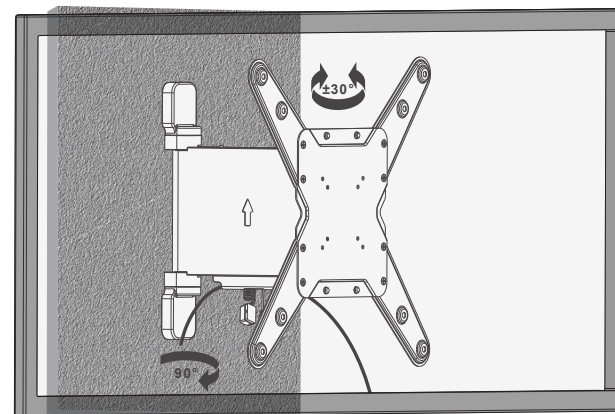

10

! Do not open the electrical cover.

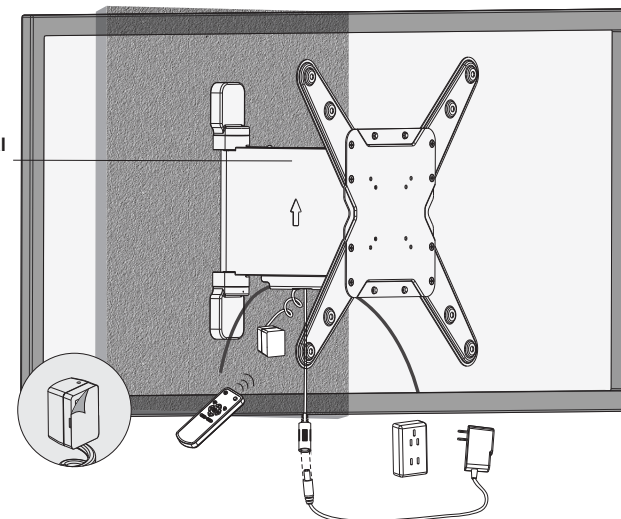

11

Remote control operation instructions

STEP 1: When powered, the buzzer sounds once beep, TV wall mount will be in standby state.

STEP 2: Press **OK** to return the TV wall mount flat against the wall and hear one beep from the buzzer, the system will then enter a working condition.

STEP 3: Follow the Key function instructions below to operate.

Note: • If TV wall mount encounters an obstacle or has some damage of machinery part in the process, TV wall mount will stop automatically and sound three times beep beep beep.

• When the wall mount meets with an obstacle in the process. Please remove the obstacle and push the wall mount by hand until returns it flat against the wall. The wall mount can normal use after press **Home** button.

